



## Pitching Instructions – Amazon 600 & 800

### FLYSHEET FIRST PITCHING (Sewn in groundsheet)

- Assemble poles and lay them parallel on the ground.
- 600 - 10 steel upright, 5 steel curved roof poles & 2 fibreglass door cover poles
- 800 - 12 steel upright, 6 steel curved roof poles & 2 fibreglass door cover poles
- Open flysheet on ground and position tent in required direction. Zip off the porch canopy.
- Ensure the flysheet doors are closed when pitching the tent.
- Locate pole sleeves on roof section of flysheet and insert the curved roof poles, leaving aside one for the canopy.
- Insert upright poles into roof poles.
- On both sides of the tent, loosen the tension straps and locate the ends of each pole into the corresponding ring & pin.
- Attach the clips to the poles and tension the pole end straps.
- Lay pole arches on the ground. The front of the tent should be face down with the back of the tent on top.
- Peg out adjustable anchor straps at both corners of rear end of tent using the V-pegs supplied.

### With one person at each side of the tent gather all the poles together and lift into the upright position

- Pull flysheet forward, away from pegged points, until tent takes shape. Peg the two anchor straps at the front doorway using the V-pegs.
- At this point ensure that all the poles are in line with each other and that the tent is sitting square.
- Peg down all pole positions through the metal rings using pin-pegs – take care that the poles are aligned with the adjacent seams.
- Peg down remaining flysheet pegging points using pin-pegs.
- Insert fibreglass brow poles above side doors.
- Clip the vents above the windows to the poles using the plastic clips.
- Peg out **ALL** guy lines using pin-pegs.
- Zip the canopy back onto the front of the tent. Insert the remaining curved roof pole and attach the uprights.
- Peg out the canopy's guy lines.
- The front and side doors have an extra PE flap which should be tucked under the tent groundsheet as an extra seal against rain or wind entry.

### INNER ATTACHMENT

- Open out inner tents inside flysheet and position doorways to correspond with the living area.
- Webbing straps with buckles at top of inner are colour coded.
- Clip buckles to corresponding coloured roof buckle.
- Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
- Suspend the inner by attaching toggles of inner tent through rings on inside of flysheet. Do the rear first and work forward.

#### **Ring and Pin System.**

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1)**. Push the pole into a curve from the the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2)**.

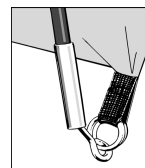


Figure 1.

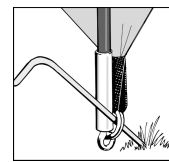


Figure 2.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.