



Tent Pitching Instructions - Beta 250, 350 & 450

FLYSHEET FIRST PITCHING/COMBINED PITCHING

- Assemble poles and lay them parallel on the ground. (3 poles) **Each pole is colour coded in centre to match the corresponding pole sleeve.**
- Open flysheet on ground and position tent in desired direction.
- Locate pole sleeves on the flysheet and insert poles, one at a time. Locate one end of each pole into corresponding pin system on flysheet.
- Push poles into an arch from opposite side and locate pole ends into corresponding pin system on flysheet.
- Peg out elasticated pegging points at both corners of one end of tent using pin-pegs supplied.
- Pull flysheet taut, away from pegged points, until tent takes shape. Peg the opposite two elasticated pegging points using the pin-pegs. Ensure the tent is in a straight line.
- Peg down poles through metal rings and remaining flysheet pegging points using alloy pin-pegs.
- Peg out **ALL** guy lines using the pin-pegs.

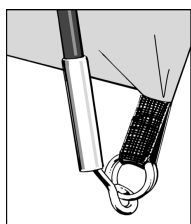


Figure 1.

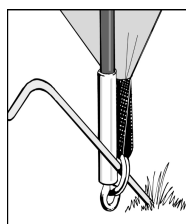


Figure 2.

Ring and Pin System.

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1)**. Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2)**.

INNER TENT

- Open out inner tent inside flysheet and position doorway to correspond with the porch entrance of the flysheet.
- Starting from the rear corners of the tent, attach the hooks on the groundsheet to corresponding rings on the base of the flysheet.
- Suspend the inner by attaching hooks of inner tent with rings on inside of flysheet. Start at the rear and work forwards.
- Attach hooks on front of groundsheet, to corresponding rings on base of flysheet.
- Attach porch groundsheet using the hooks to attach to the rings at the base of the poles and at the front of the tent. Use the flat top groundsheet pegs in the eyelets across the entrance to the tent to secure the groundsheet.

ALL IN ONE PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material.
- In humid or very wet weather the underside of the flysheet may become laden with condensation. If this occurs it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.