



Pitching Instructions - Delta 300

FLYSHEET FIRST PITCHING

- Assemble poles and lay them parallel on the ground (3 poles:- 2 longer diagonal poles and 1 shorter porch pole)
- Open out flysheet and position in required direction
- **The poles are colour coded to match corresponding pole sleeve entry point.**
- Insert the two longer poles diagonally through pole sleeves on outside of flysheet.
- Insert the shorter porch pole into front pole sleeve over doorway
- Locate one end of each diagonal pole onto pin system at flysheet corners
- Push each diagonal pole into an arch from opposite end and locate pole ends onto corresponding pin system.
- Locate one end of the porch pole onto second pin at front pole end of tent.
- Push porch pole into an arch from opposite side and locate pole end onto pin system.
- Peg down four corners through the metal ring using pin-pegs.
- Pull out porch doorway and peg down elastic pegging points at the base using pin-pegs.
- Peg out all remaining pegging points on the base of the flysheet using pin-pegs.
- Peg out **ALL** guy lines using pin-pegs ensuring that guy line fabric attachment points are evenly tensioned.

- **Ring and Pin.** Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1).** Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
- Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2).**

INNER

- Open out inner inside flysheet and position doorway to correspond with flysheet entrance.
- Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding ring on base of the flysheet.
- Attach elasticated toggles on inner tent to corresponding eyelets on inside of flysheet.

COMBINED PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material.
- In humid or very wet weather the underside of the flysheet may become laden with condensation. If this occurs it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.

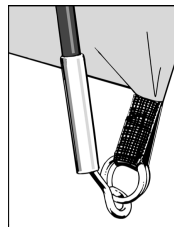


Figure 1.

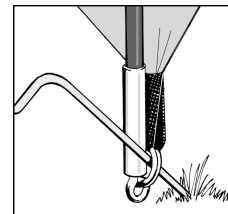


Figure 2.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.