

Pitching Instructions - Extension

Pitching Instructions

- Assemble the poles & insert into colour coded sleeves.
- Locate one end of the pole in ring & pin system as **Figure 1** below.
- Push poles into an arch from opposite side and locate other pole end on to corresponding pin system on flysheet.
- Tension the webbing strap at the pole end.
- Position the elasticated end of canopy towards tent.
- Position elasticated guy rope sleeve behind the front tent pole.
- Secure in position by pegging out the guy lines.
- Ensure entrance zips are closed, then peg out the front of the canopy to tension the material.
- Peg out ALL peg points including rings as figure 2, and peg out ALL guy lines.

The Vango Sun Canopy is designed for use in lowland sheltered campsites. Do not pitch in high winds or exposed campsites.







Figure 2.