



## Tent Pitching Instructions – Milano 2 & 3

### FLYSHEET FIRST PITCHING/COMBINED PITCHING

- Assemble poles and lay them parallel on the ground. (3 poles; 1 long pole and 2 shorter equal length poles).
- Open flysheet on ground and position tent in desired direction.
- Locate pole sleeves on the flysheet and insert poles, one at a time (The poles are colour coded to match corresponding pole sleeve entry points). Locate one end of each pole into corresponding pin system on flysheet (see fig. 1).
- Push poles into an arch from opposite side and locate pole ends into corresponding pin system on flysheet.
- Peg out elasticised pegging points at both corners of one end of tent using pin-pegs supplied.
- Pull flysheet taut, away from pegged points, until tent takes shape. Peg the opposite two elasticised pegging points using the pin-pegs.
- Peg down poles through metal rings (see fig. 2) and remaining flysheet pegging points using the pin-pegs.
- Peg out **ALL** guy lines using the pin-pegs.

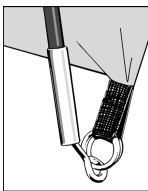


Figure 1.

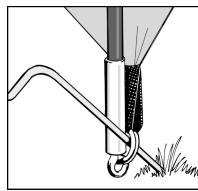


Figure 2.

### INNER TENT

- Open out inner tent inside flysheet and position doorway to correspond with the porch entrance of the flysheet.
- Starting from the rear corners of the tent, attach the hooks on the groundsheet to corresponding rings on the base of the flysheet.
- Suspend the inner by attaching hooks of inner tent with rings on inside of flysheet. Start at the rear and work forwards.
- Attach hooks on front of groundsheet, to corresponding rings on base of flysheet.
- Attach porch groundsheet using the hooks to attach to the rings at the base of the poles and at the front of the tent. Use the flat top groundsheet pegs in the eyelets across the entrance to the tent to secure the groundsheet.

### COMBINED PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material.
- In humid or very wet weather it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.

#### **Ring and Pin System.**

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1)**. Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2)**.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.