




## Tent Pitching Instructions – Peace Tepee

- Open out tent and position in required direction
- Peg down the two centre anchor straps and the single anchor strap at the rear.

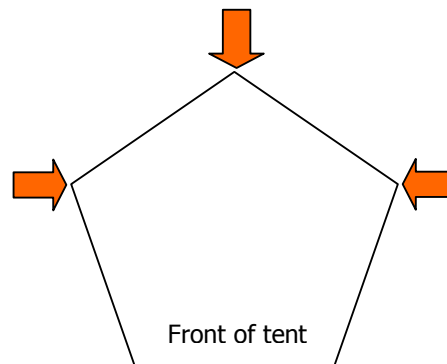

- Assemble the single upright pole.
- Open the tent door, and from inside the tent, insert the pole into the reinforced patch in the roof. Standing the pole upright, place the opposite end of the pole on the reinforced square at the centre of the ground sheet.
- The tent should now stand upright.
- Close the door, then peg down the remaining two anchor straps at the front of the tent.
- Some re-pegging of anchor straps may be necessary to get groundsheet flat and tight.
- Peg the remaining elasticated pegging points around the base of the flysheet.
- Peg out ALL guy lines, ensuring that they are in line with the seam they are attached to.
- Sewn in groundsheet at front door has side zips so that it can be dropped down when required

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or  
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.  
UK Consumer Hotline: 0844 811 0535 E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.