



## Tent Pitching Instructions – Shadow 200+

### FLYSHEET FIRST PITCHING/COMBINED PITCHING

- Assemble poles and lay them parallel on the ground. 4 poles; 3 main poles of same length, and 1 pre-angled porch pole.
- Open flysheet on ground and position tent in desired direction.
- Locate pole sleeves on outside of flysheet and insert the poles.
- Locate one end of each main pole into eyelets on top (roof) of flysheet. The centre pole locates in to an eyelet in the porch pole sleeve.
- Starting at one side, push main poles into an arch from opposite side and locate pole ends into corresponding eyelets on pole anchor straps at bottom of flysheet.
- Locate one end of porch pole into eyelet on pole anchor strap. Push the pole in to an arch from opposite side, and locate end into pole anchor strap.
- Peg out pole anchor straps at both front corners of tent using pegs supplied.
- Pull flysheet taut, towards rear, away from pegged points, until tent takes shape. Peg the remaining pole anchor strap.
- Peg down elastic peg points at base of flysheet door.
- Peg down remaining flysheet pegging points.
- Peg out **ALL** guy lines.

### INNER TENT

- Open out inner tent inside flysheet and position doorway to correspond with the porch entrance of the flysheet.
- Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
- Suspend the inner by attaching hooks of inner tent with rings on inside of flysheet.
- Peg out front of porch groundsheet.

### INNER/FLYSHEET COMBINED PITCHING

- The inner tent and flysheet can remain attached when pitching or packing. However, in humid or very wet weather, the underside of the flysheet may become laden with condensation. If this occurs, it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or  
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.  
UK Consumer Hotline: 0844 811 0535 E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.