



Tent Pitching Instructions Ultralite 100



PITCHING

- Assemble the four poles and lay on the ground.
- Open flysheet on ground and position tent in desired direction.
- Locate black pole sleeve at apex of flysheet and insert the longest pole.
- Locate one end of each pole into corresponding eyelets on pole anchor strap
- Push the pole into an arch and locate end into corresponding eyelet.
- Attach the flysheet clips to the poles.
- The medium length pole is positioned at right angles to the main pole, across the top of the vent.
- Insert the two short poles into their eyelets at each end of the tent.
- Peg out all anchor straps and pegging points.

VARIABLE AIR FLOW VENTILATION

The large vents in the roof of the tent are best left open as much as possible to:

- reduce condensation
- stabilise the tent in strong winds

TENSION BAND SYSTEM

- TBS increases the stability of the Ultralite 100. Tighten the cords once the tent is pitched.
- DO NOT OVERTENSION. Excess tension will alter the shape of the tent and may permanently distort the poles.



IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.