



Tent Pitching Instructions Vitesse 200



PITCHING

- Assemble the two poles and lay them on the ground.
- Open flysheet on ground and position in desired direction.
- Locate each pole into the socket on the roof and position into the webbing square on the groundsheet.
- Peg out groundsheet using the adjustable webbing loops.
- The elastic shockcord points around the flysheet can then be looped over the pegs.
- Pull the tent forwards until taut and peg out the door.

ALTERNATIVE PITCHING METHODS

- The webbing loops at the front and rear of the ridge can be used to suspend the tent from trees or other objects.
- Walking poles can be used in place of the alloy poles. Insert the poles, adjust and lock at the correct height.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.