



## Tent Pitching Instructions Baltoro 200



### INNER FIRST PITCHING

1. Assemble the four poles and lay them parallel on the ground.
2. Open inner tent on ground and position in desired direction.
3. Insert the longer poles through the mesh pole sleeves running diagonally across the length of the inner. The poles are colour coded to match the corresponding pole sleeve entry point.
4. Insert the two remaining poles through pole sleeves running across the width of the inner.
5. Locate the ends of the long diagonal poles into the eyelets on one end of groundsheet.
6. Push these poles from the opposite side, forming an arch and locate the pole ends into corresponding eyelets on pole anchor strap.
7. Repeat this process for the two remaining poles.
8. The tent will now be free standing, reposition if required.
9. Tighten all pole anchor straps.
10. Peg out inner using pin pegs.

### FLYSHEET

1. Open out flysheet and position over the inner tent. The tent is constructed symmetrically so can be lined up in either direction.
2. Attach the hook/loop tabs on the underside of the flysheet around the pole crossover points.
3. Attach the clips to the elastic loops at the sides of the tent.
4. Connect the side-release buckles at the base of the flysheet to the corresponding socket on the pole anchor straps of the groundsheet.
5. Peg out the main anchor straps on both porches and tighten.
6. Care should be taken to avoid over tension of the anchor straps as undue stress may cause damage to the flysheet fabric.
7. Peg out all guylines ensuring that guyline fabric attachment points are evenly tensioned.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or  
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.  
UK Consumer Hotline: 0844 811 0535 E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.