



Tent Pitching Instructions – Banshee 200 & 300

INNER FIRST PITCHING

- Assemble poles and lay them on the ground parallel - 2 poles – 1 x long pole and 1 x shorter pole.
The poles are colour coded to link with colour of pole sleeve end binding
- Open inner on ground and position tent in desired direction.
- Locate pole sleeves on inner tent and insert poles.
- On one side, locate the end of each pole into corresponding eyelets on pole anchor straps.
- On opposite side, push poles into an arch and locate pole ends into corresponding eyelets on pole anchor straps.
- Peg out anchor straps at both corners of one end of tent using pin pegs supplied.
- Pull inner tent from other end, away from end pegged points, until tent takes shape. Peg the opposite two anchor straps.
- Peg down pole anchor straps and remaining flysheet pegging points.
- Attach inner clips to poles.
- On the 200 model attach sponge piece using the ties on the front of the inner.

Flysheet

- Open out flysheet and position doorway to correspond with the main pole on the inner tent.
- Attach the small velcro tabs to the poles
- Starting from the rear corners of the tent, attach the side release buckles on the groundsheet to corresponding buckles on the flysheet anchor straps.
- Peg out **all** peg points & guylines

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk
Calls to our Customer Hotline cost 5p per minute.
Calls from mobile phones, cable networks or public payphones will generally cost more.