

Pitching Instructions Dart & Dart DS

Pop-Up Pitching

- Remove tent from the bag and carefully remove the attached elastic strap.
- The tent will now be free to pop open.
- Position the tent in the required direction and peg out the corners of the flysheet so that the groundsheet is taut.

DS Model Only

- Peg out all guy lines using the pin-pegs supplied, ensuring that the guy line fabric attachment points are evenly tensioned.
- Attach the inner to the top of the flysheet using the elasticated toggles.

