



## Tent Pitching Instructions Hurricane 200 & 300



### FLYSHEET FIRST PITCHING

1. Assemble the four poles and lay them on the ground.
2. Open flysheet on ground and position tent in desired direction.
3. The poles are colour coded for easier identification. Insert the longer poles through the black pole sleeves running diagonally across the length of flysheet, making sure that the pole feeds back into the sleeve at junction points.
4. Insert two remaining poles through pole sleeves running across the width of the flysheet.
5. Locate the ends of the long diagonal poles into the eyelets on one end of flysheet.
6. Push these poles from the opposite side, forming an arch and locate the pole ends into corresponding eyelets on pole anchor strap.
7. Repeat this process for the two remaining poles.
8. Tighten the flysheet by adjusting the tension straps to suit. Attach the flysheet clips to the poles.
9. The tent will now be free standing, reposition if required.
10. Peg out adjustable anchor straps at one end of the tent, using alloy pin pegs.
11. Pull the tent forwards and peg the anchor straps on the opposite end.
12. Peg through webbing loops located at each pole anchor strap using the pegs.
13. Peg out **ALL** guy lines using alloy Y pegs ensuring that attachment points are evenly tensioned.

### INNER TENT (if previously removed)

1. Open out inner tent inside flysheet and position doorway to align with flysheet doors.
2. Starting from the middle, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
3. Suspend the inner by linking the elastic loops to the clips on inside of flysheet.

### INNER/FLYSHEET COMBINED PITCHING

- The inner tent and flysheet can remain attached when pitching or packing. However, in humid or very wet weather, the underside of the flysheet may be coated with condensation. If this occurs, it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming wet.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or  
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.  
UK Consumer Hotline: 0844 811 0535 E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.