



Tent Pitching Instructions – Icarus 400 & 500

FLYSHEET FIRST PITCHING

- Assemble the 3 poles and lay them parallel on the ground.
- Open out flysheet and position in required direction.
- Insert the poles through the pole sleeves on the outside of the flysheet.
- Locate one end of each pole on one side of flysheet, into the metal pin system at the end of the pole sleeves. Make sure poles locate into correct pin system (all poles follow corresponding flysheet seams to pin system).
- Push poles into an arch from opposite ends and locate pole ends into corresponding metal pin.
- Start pegging out the tent using the main corners at one end of the tent using the steel pin pegs provided.
- Pull the tent forward until taut and peg out the main corners at the other end of the tent, again with the steel pin pegs.
- Ensure the tent is in a straight line.
- Secure the tent using the pin pegs through the ring & pin system – see diagram below.
- Peg out ALL guy lines, ensuring that they are in line with the pole or seam they are attached to.

INNER ATTACHMENT

- The inner is sewn into the groundsheet for ease of pitching.
- Suspend the inner by attaching toggles on the inner tent through rings on the inside of the flysheet. Do the rear first and work towards the front of the tent.
- Finally, connect the three parts of the pelmet using the velcro tabs.

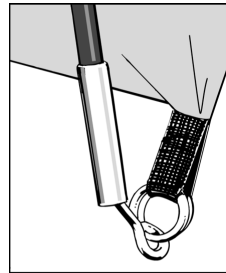


Figure 1.

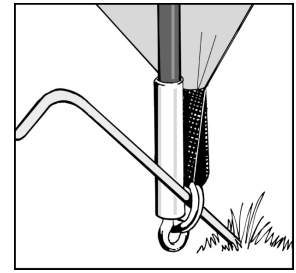


Figure 2.

Ring and Pin System

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1)**. Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2)**.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.