



Tent Pitching Instructions Tornado 200 & 300



FLYSHEET FIRST PITCHING

1. Assemble the three poles and lay them on the ground.
2. Open flysheet on ground and position tent in desired direction.
3. Insert the long poles through the black pole sleeves running diagonally across the length of flysheet, making sure that the pole feeds back into the sleeve at junction points.
4. Insert the remaining pole across the width of the flysheet.
5. Locate the ends of the diagonal poles into the eyelets at the rear of the tent.
6. Push the diagonal poles into an arch from the front of the tent and locate the pole ends into corresponding eyelets on pole anchor strap.
7. Connect the pole across the width of tent into corresponding eyelets.
8. Tighten flysheet tension straps at end of each pole. Attach the flysheet clips to the poles.
9. The tent will now be free standing, reposition if required.
10. Peg through webbing loops located at each pole anchor strap using alloy pin pegs. Peg all flysheet pegging points.
11. Peg out **ALL** guy lines using alloy Y pegs ensuring that guy line fabric attachment points are evenly tensioned.

INNER TENT (if previously removed)

1. Open out inner tent inside flysheet and position doorway to correspond with the porch.
2. Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
3. Suspend the inner by linking the elastic loops to the hooks on inside of flysheet.

INNER/FLYSHEET COMBINED PITCHING

- The inner tent and flysheet can remain attached when pitching or packing. However, in humid or very wet weather, the underside of the flysheet may be coated with condensation. If this occurs, it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming wet.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.