



## Tent Pitching Instructions Typhoon 200 & 300



### FLYSHEET FIRST PITCHING

1. Assemble the three poles and lay them on the ground.
2. Open out flysheet and position in required direction.
3. Insert poles into colour coded flat external pole sleeves, making sure that the pole feeds back into the sleeve at junction points.
4. Locate the end of each pole into the eyelets on one side of flysheet.
5. Push poles into an arch from opposite side and locate pole ends into corresponding eyelets.
6. Tighten the flysheet by adjusting the tension straps to suit.
7. The tent will now be free standing, reposition if required.
8. Peg through webbing loops located at each pole anchor strap using the alloy pin pegs.
9. Pull the front door forward and peg through the elastic loops. Repeat for the back door.
10. Peg out **ALL** guy lines using alloy Y pegs ensuring that attachment points are evenly tensioned.

### INNER TENT (if previously removed)

1. Open out inner tent inside flysheet and position to correspond with the pole layout.
2. Attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
3. Suspend the inner by attaching elastic of inner tent with clips on inside of flysheet.

### INNER/FLYSHEET COMBINED PITCHING

- The inner tent and flysheet can remain attached when pitching or packing. However, in humid or very wet weather, the underside of the flysheet may be coated with condensation. If this occurs, it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming wet.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or  
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.  
UK Consumer Hotline: 0844 811 0535 E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.