




## Pitching Instructions - Wide Canopy


### Pitching Instructions

- Assemble the poles; 2 long steel uprights & 1 long curved roof pole; and 2 shorter steel uprights & 1 shorter steel curved roof pole.
- Insert the curved roof poles through the sleeves on the canopy.
- Attach the upright poles to the roof poles.
- Locate one end of the pole in ring & pin system as **Figure 1** below.
- Stand the canopy upright and locate other pole end on to corresponding pin system on flysheet.
- Tension the webbing strap at the pole end, and attach pole clips to poles.
- Position the elasticated end of canopy towards tent.
- Position elasticated guy rope sleeve behind the front tent pole.
- Secure in position by pegging out the guy lines.
- Peg out the front of the canopy to tension the material.
- Peg out **ALL** peg points including rings as **figure 2**, and peg out **ALL** guy lines.

**The Vango Wide Canopy is designed for use in lowland sheltered campsites.  
Do not pitch in high winds or exposed campsites.**

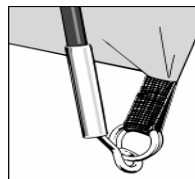

**Figure 1.**

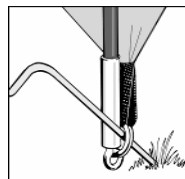

**Figure 2.**

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or  
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.  
UK Consumer Hotline: 0844 811 0535 E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.